

Installation, Operating and Maintenance Manual


STS 7010

Automated Fuel Filtration System
with HMI PLC Touch-Screen Controller



- Modbus, TCP/IP, LAN and Internet Connectivity
- E-mail & SMS Maintenance Alerts
- Maintenance Alert Log File
- Multiple-tank Functionality
- Runtime Totalizer
- On-screen Help
- Alarm History

Optimal Fuel Quality • Reliable Power

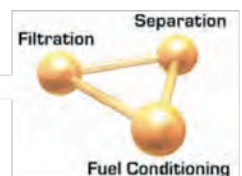

INSTALLATION, OPERATING AND MAINTENANCE MANUAL

TABLE OF CONTENTS

OVERVIEW – BASIC SYSTEM COMPONENTS	7
GENERAL SPECIFICATIONS	8
STS 7010	8
SYSTEM COMPONENTS	8
Control and Safety Devices	8
Pump / Motor:	8
Primary Filter / Water Separator	9
Fuel Conditioner	9
Secondary Filter	9
Weatherproof double door wall-mounted enclosure with lockable handles / latches.....	9
Stainless steel plumbing	9
PRIMARY INSPECTION	9
Checklist:	9
INSTALLATION.....	10
Mounting.....	10
Electrical	10
Plumbing.....	10
Typical plumbing / Above ground tank installation (schematically).....	11
IMPORTANT INSTALLATION PRECAUTIONS	11
PRIMING THE SYSTEM.....	12
TOUCH-SCREEN CONTROLLER - ALARM FEATURES	12
INITIAL START-UP / COMMISSIONING CHECKLIST.....	14
Flow switch setting / adjustment (“No Flow Alarm”).....	14
Gauge venting / accuracy	14
Initial test procedure	14
OPERATION	16
Emergency Stop.....	16
PUMP OPERATION	16
SETTING THE CURRENT TIME AND DATE	16
PROGRAMMING THE TIMER	17
Fuel Line Leak	17
Stabilizing and Optimizing Fuel Quality.....	17
MAINTENANCE	18
Preventative Maintenance.....	18
Servicing primary filter	19
Servicing water separator.....	19
Servicing secondary filters	20
TROUBLESHOOTING.....	21
AUTOMATIC FUEL FILTRATION Systems Warranty	23
LIMITED WARRANTY	23
WARRANTY CLAIM PROCEDURE.....	23
Technical Assistance and Ordering	24
Replacement filter elements	24
STS 7010 System Identification.....	24
APPENDIX A - ABBREVIATIONS USED IN THIS MANUAL.....	25
APPENDIX B – DRAWINGS.....	26

STS 7010

Programmable Automated Fuel Filtration System



STS 7010 Programmable Automated Fuel Filtration Systems are self-contained, stand-alone systems that remove and prevent the buildup of water, sludge and contaminants in tanks. They stabilize diesel and bio-fuels, eliminate microbial contamination to optimize and maintain fuel quality. STS systems guarantee **Optimal Fuel Quality for Reliable Power at All Times**.



The new STS 7000 Series is equipped with a UL508A Touch-Screen Controller with Modbus, TCP/IP, LAN and Internet connectivity for more intuitive system setup and monitoring from remote locations.

STS 7000 Series includes:

- Modbus, TCP/IP, LAN and Internet connectivity
- E-mail & SMS Maintenance Alerts
- Maintenance Alert Log File
- Multiple tank functionality
- Runtime Totalizer
- Alarm History
- On-screen Help

All STS Systems feature:

- Multi-stage water removal and particulate filtration
- NEMA 12, 13, 4 Powder Coated or Stainless
- UL508A Smart Filtration Controller
- Continuous-Duty Pump, Viton Seals
- Stainless Steel Plumbing
- Stand-Alone, Reliable & Turn-Key

For safe operation, the STS 7000 Series' Touch-Screen Controller triggers automatic alarms and shuts down the pump when filters need service; a leak is detected; high separator water level, high filter vacuum, or high pump pressure occurs; or when the fuel flow is out of range.

Implementing STS Fuel Quality Optimization & Maintenance Systems guarantee **Optimal Fuel Quality for Reliable Power At All Times**. STS 7000 Series prevents downtime, periodic tank cleaning, replacing out-of-spec fuel and fuel-quality related injection system repairs.

STS 7010 SPECIFICATIONS

Flow Rate	10 GPM
Primary Filter/Water Separator/Coalescer	10 or 30 μ Particulate or 60 μ SS Screen
Secondary Filter/Water Block	1, 3, 10 or 25 μ Fine Filter 3 or 10 μ Water Block
Fuel Conditioner	LG-X 3000
Smart Filtration Controller	HMI PLC Controller with Touch-Screen and remote monitoring, Modbus, TCP/IP LAN and Internet connectivity
Pump	Internal Gear Pump
Power	110V 60Hz 20A or 230V 50Hz 15A
Plumbing	Stainless Steel
Ports	In 1" NPT Out 1" NPT
Weatherproof Cabinet	NEMA 12, 13, 4 Powder Coat or Stainless
Dimensions	37" x 60" x 12" (94 x 152 x 30 cm)
Weight	≈400 lbs
Not for use with fluids that have a flash point below 100°F.	




+1-239-690-9589
1-877-425-4239 Toll Free
www.AXIFuelConditioning.com

Wherever fuel is being used or stored

Preventive Maintenance Plans for mission-critical power are essential. However, most service agreements do not cover fuel-related engine failures. Fuel has a limited shelf-life and even "fresh fuel" could contain water, sediment, microbes and bio-fuel components upon delivery.

Periodic generator tests-runs are too short to determine if fuel quality is adequate for the demands of continuous, full-load operation. In fact, generator test runs significantly accelerate the fuel polymerization and degradation process by returning fuel that has been compromised by heat and pressure back to the tank.

Potential liabilities can easily be avoided by implementing an AXI Fuel Quality Maintenance Program as part of every disaster recovery plan. An STS 7000 automatically maintains fuel quality and guarantees reliable emergency power whenever it is needed.

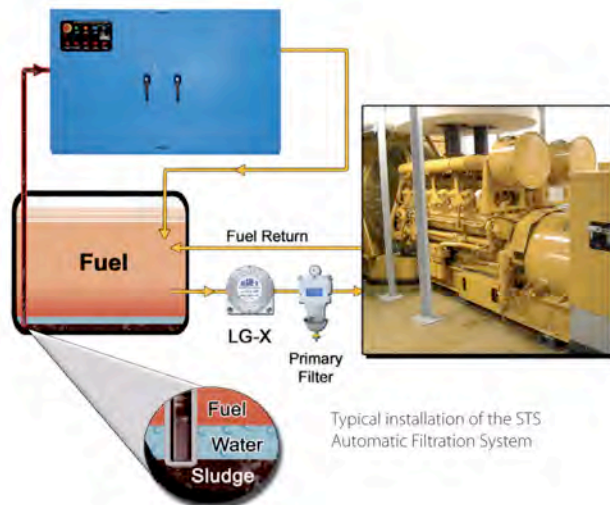

The system is automatically operated by the programmable UL508A Touch-Screen Controller with Modbus, TCP/IP, LAN and Internet connectivity. All components and control devices are contained within a fully enclosed, lockable, weatherproof, NEMA-rated cabinet.

The principal components are a continuous-duty motor with coupled gear pump, a strainer/primary coalescing filter with vacuum sensor and gauge, an ALGAE-X Fuel Conditioner and a secondary water block fine filter with pressure gauge and sensor.

The SEPAR primary filter protects the pump, coalesces and removes water and particulate. The patented ALGAE-X Fuel Conditioner prevents and reverses fuel degradation, agglomeration and microbial contamination. The secondary filter is a quick-change spin-on filter designed to remove dissolved and emulsified water and contaminants down to 1 µ.




Inside the STS 7010

1. Fuel Inlet (From Tank)
2. Inlet Ball Valve
3. Separ Primary Filter / Water Separator
4. Vacuum Gauge
5. Drain Valve (push and turn open)
6. Man. Air Vent / Bleed Screw
7. Vacuum Switch
8. ALGAE-X® Touch-Screen Controller
9. Pressure Relief Valve
10. Gear Pump
11. Motor
12. ALGAE-X® Magnetic Fuel Conditioner
13. Secondary Filters (two in parallel)
14. Pressure Switch (behind post)
15. Pressure Gauge
16. Outlet Ball Valve
17. Fuel Outlet (To Tank)
18. Mechanical Flow Meter with Flow Switch
19. Leak Detector (Float Switch) in Spill Tray

STS 7010 Accessories:

- Multiple tank functions
- AFC-705 Fuel Catalyst
- Digital Flow Meter
- Foot Valve
- Wide range of filter elements

OVERVIEW – BASIC SYSTEM COMPONENTS

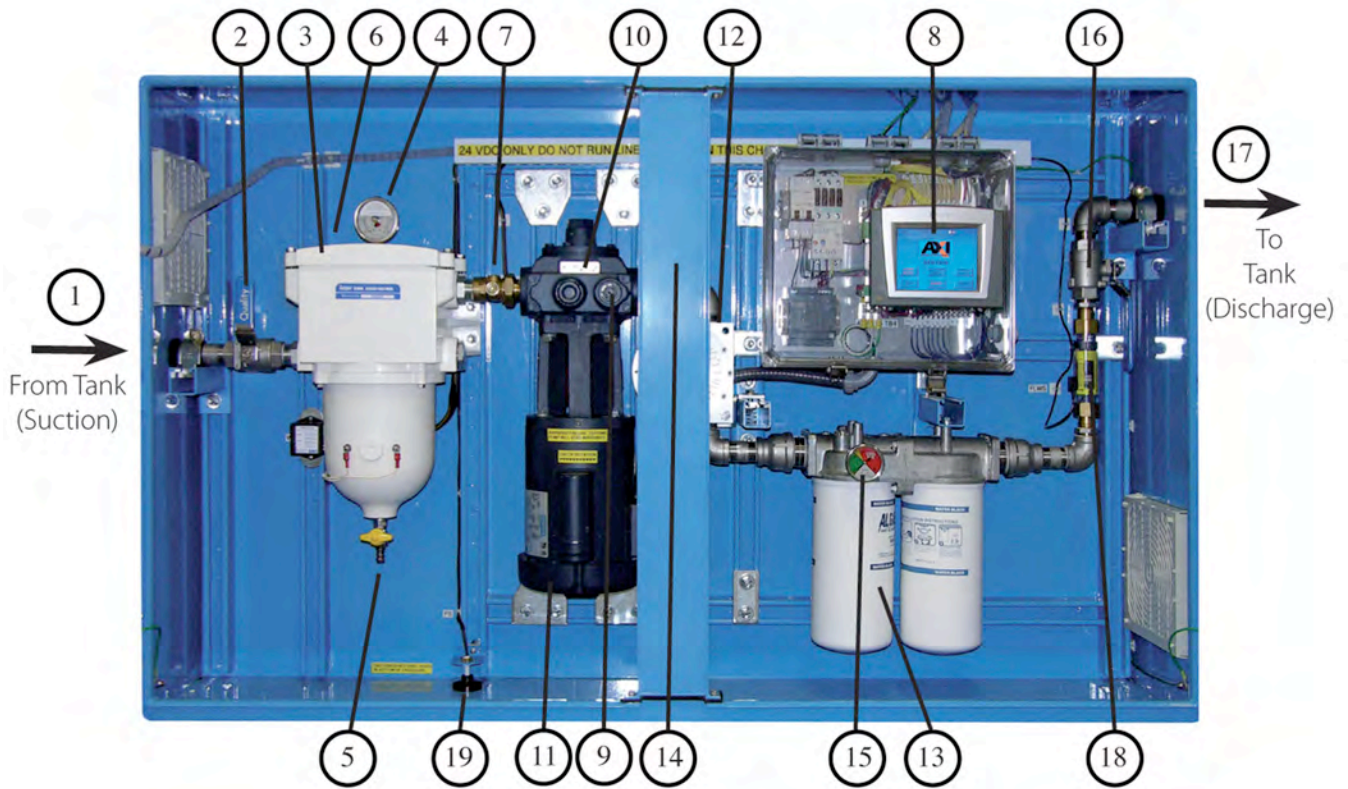

- | | |
|---|--|
| 1) Fuel Inlet (From Tank) | 11) Motor |
| 2) Inlet Ball Valve | 12) ALGAE-X® Magnetic Fuel Conditioner |
| 3) Separ Primary Filter / Water Separator | 13) Secondary Filters (two in parallel) |
| 4) Vacuum Gauge | 14) Pressure Switch (behind post) |
| 5) Drain Valve (push and turn open) | 15) Pressure Gauge |
| 6) Man. Air Vent / Bleed Screw | 16) Outlet Ball Valve |
| 7) Vacuum Switch | 17) Fuel Outlet (To Tank) |
| 8) ALGAE-X® Smart Filtration Controller | 18) Mechanical Flow Meter with Flow Switch |
| 9) Pressure Relief Valve | 19) Leak Detector (Float Switch) in Spill Tray |
| 10) Gear Pump | |

GENERAL SPECIFICATIONS

STS 7010

Flow Rate	10 gpm / 600 gph
.....	4,800 Gallons per 8 hour shift
.....	14,400 Gallons per 24 hours
Outline Dimensions (Enclosure)	37" x 60" x 12" (H x W x D)
System Weight	approx. 400 lbs
Operating Temperature	41 to 104° F; 5 to 40° C
Electrical	115 V / 60 Hz / single phase (standard)
	230 V / 50 Hz also available
Pump	Gear Pump
Suction capability (primed).....	15 ft vertical or 100 ft. horizontal lift (lines >1", primed)
Motor	1 hp single phase, continuous duty
Timer	Programmable Digital Timer
Inlet	1" NPT male port
Outlet	1" NPT male port
Max. Fluid Viscosity.....	5 cSt

**Note: The STS 7010 is designed to meet environmental standards for safe operation.
(NOT for use with fluids that have a flash point below 100 F (38 C), e.g.: gasoline, alcohol, ...)**

SYSTEM COMPONENTS

CONTROL AND SAFETY DEVICES

Algae-X "Touch-Screen Controller" in electrical sub enclosure – UL 508A listed Industrial Control Panel
Programmable Digital Timer –Memory backup to retain program memory during power outages
Pump control switch (Auto-Off-Manual), weatherproof, key operated
Alarm Reset - weatherproof push button
Power available indicator
Pump running indicator
External remote shut-down feature
Inlet and outlet shut off ball valves
Emergency stop button
Pressure relief valve

Leak sensor and alarm indicator (system shutdown)
Primary filter / water separator high vacuum alarm indicator and system shutdown (vacuum sensor)
Primary filter / water separator high water alarm indicator and system shutdown (water sensor)
Secondary filter high pressure alarm indicator and system shutdown (pressure sensor)
Flow meter with "no flow" alarm indicator and system shutdown (flow switch)
Pump motor starter with single-pole circuit breaker, contactor and overload relay

PUMP / MOTOR:

Positive displacement gear pump
Relief valve
Motor – UL listed
TEFC (Totally enclosed fan cooled)

PRIMARY FILTER / WATER SEPARATOR

SEPAR fuel filter with water separator
Drain valve on the bottom

Analog vacuum gauge
Back flushable 30-micron filter cartridge (other filter elements available)

FUEL CONDITIONER

Inline Algae-X Fuel Conditioner eliminates and prevents microbial contamination and the formation of sediments that naturally occur in diesel fuel.

SECONDARY FILTER

Two 3 Micron water blocking spin on filter (other filter elements available)
Pressure gauge (stainless steel, liquid filled)

WEATHERPROOF DOUBLE DOOR WALL-MOUNTED ENCLOSURE WITH LOCKABLE HANDLES / LATCHES

14-gauge steel construction with continuously welded seams
Concealed hinges
Finished in polyester powder coat inside and out over phosphatized surfaces

Spill tray with leak detection
Louvered side panels
Brackets for wall mounting
Literature pocket

STAINLESS STEEL PLUMBING

PRIMARY INSPECTION

Upon arrival, the STS 7010 Automatic Fuel Filtration System and accessories must be visually inspected before installation. Improper handling during shipping may cause physical or electrical problems. Immediately report or note any damages (also concealed ones) to the shipper.

Checklist:

- If the packing crate shows signs of damage inspect the STS 7010 cabinet for damage. Check the entire outside of the cabinet for damage that could indicate internal mechanical or electrical problems.
- Check locking handles, door and hinge operation.
- Check pump/motor hardware and all plumbing connections for tightness.
- Check all electrical terminals and connections for tightness.

INSTALLATION



! IMPORTANT ! It is recommended that only qualified, experienced personnel, familiar with this type of equipment, who have read and understood all the instructions in this manual should install, operate and maintain the system.

MOUNTING

The STS 7010 is a totally enclosed system and should be **permanently wall mounted on a hard, level surface**. Use **provided mounting feet for proper fastening**. This weatherproof unit is designed for well-ventilated indoor or outdoor use within specified temperature range and should be located as close to the tank as possible.

Please allow about 1 ft of space between the side louvers of the enclosure and nearby objects. This space is necessary to ensure sufficient ventilation of cooling air for the system and motor.

ELECTRICAL



! WARNING ! To avoid the risk of electric shock make sure that the power supply to the system is disconnected and ensure that the system is at zero volts, before working on any of the system's electrical parts.

Make sure that the systems power requirements and rated voltage / frequency match your electrical system (See wiring diagram). The STS 7010 may only be connected to properly grounded power sources for operator safety. Connect all components to the ground studs provided as shown on the electrical drawings.



! WARNING ! The whole system (Enclosure, doors, plumbing, motor, electric sub panel) must be properly grounded for operator safety.

Depending on length of run, use copper wiring according to specification in wiring diagram and connect system to a separate UL listed breaker (not included) appropriate for branch circuit protection.

Note: Wiring and electrical installation must be in accordance with all applicable Federal, State and Local rules, laws, standards and regulations.

Remote Pump Shut-Down Feature:

If required, connect the **"external pump shut down input terminal"** (see wiring diagram) and follow the specifications provided in the electrical wiring diagram to disable pump (e.g.: remote shut down, remote pump control, ...). Please note that the contact needs to be supplied with +24V DC from the power supply of the STS 7010 Algae-X Smart Filtration Controller.

Remote Monitoring - Dry Contacts:

The STS provides two NO (normally open) dry contacts for remote alarm monitoring. Please see wiring diagram for contact rating, connection and location.

- 1) "Summary Alarm" – dry alarm contact for high vacuum, high pressure or water detection (as well as Emergency stop and overload relay triggered)
- 2) "Leak Detection" – dry alarm contact for leak detection

PLUMBING

Use proper quality approved fuel line materials with at least 1" inner diameter on the suction side from the tank and at least 1" inner diameter on the return / discharge side back to the tank.

Note: Do not put any stress on plumbing of STS 7010 and use a backing wrench when connecting the external plumbing. Where possible, use FLEXIBLE CONNECTIONS TO PREVENT STRESS caused by thermal expansion or plumbing misalignment.

The **pick-up tube/line(s)** should originate from the **lowest point of the tank** (to remove all water), should be connected directly to the system's "PUMP INLET – SUPPLY FROM TANK" port located on the left hand side of the enclosure and **kept as short as possible**. It is recommended to install an **oversized, low restriction foot valve** to keep the system primed, especially if the "PUMP INLET – SUPPLY FROM TANK" port of the system is located above the lowest possible fuel level in the tank. A **priming tee should be installed on the highest point of the suction line** to be able to easily prime the lines and system.

The **return line(s)** should be plumbed to the "PUMP OUTLET – RETURN TO TANK" port (on the right side of the system) and enter the tank **as far as possible from the pick up tube** close to the tank bottom. A (swing) **check valve may be required on the return line(s)** on some installations to prevent back flow pressure.


Multiple suction and/or return lines may be connected to a manifold outside the STS 7010 (see options list).

Anti-Siphon or other external plumbing devices may be required – please check local regulations / code.

The system capabilities are 15 ft suction (vertical) or 100 ft horizontal lift, when connected to piping of 1" ID or more with no additional flow restrictions such as valves, 90-degree connectors or other plumbing accessories. For continuous optimal performance, make sure suction and discharge lines are free and that nothing is blocking the flow of fuel and that the **suction line always stays primed**.

Note: Plumbing and Installation must be in accordance with all applicable Federal, State and Local rules, laws, standards and regulations.

TYPICAL PLUMBING / ABOVE GROUND TANK INSTALLATION (SCHEMATICALLY)

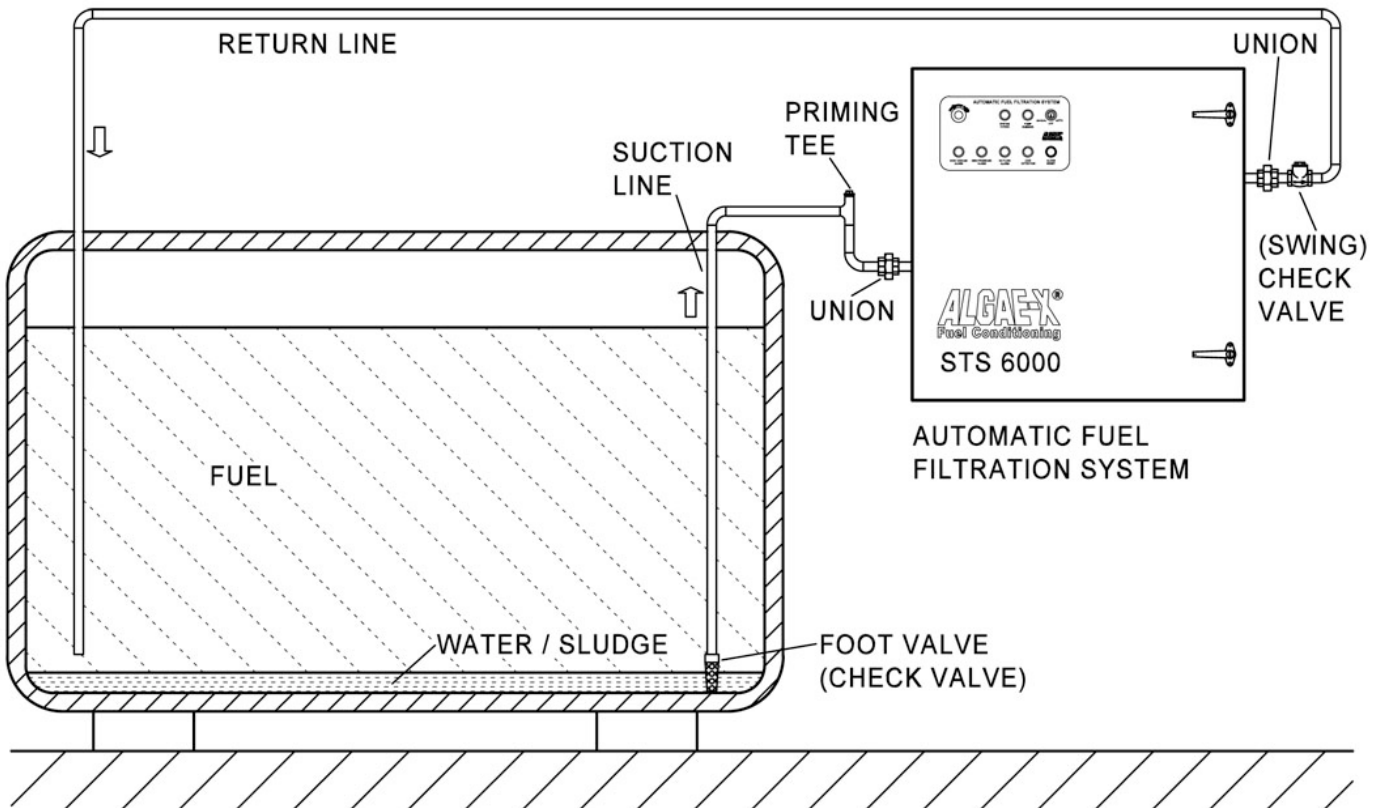

IMPORTANT INSTALLATION PRECAUTIONS

The **suction line** of the system should be independent and separate from the suction line of the engine. If that is not possible, appropriate valves must be installed to completely separate the STS 7010 from the engine fuel system to prevent any possible interference with safe engine operation.

It is highly recommended to plumb the **discharge line** independent and separate of the engine's fuel return line back to the tank. If the return line from the engine and the discharge of the STS 7010 have to be combined in any way, adequate valves should be installed to prevent any possible interference with safe engine operation.

Note: If any of the STS 7010 system's fuel lines are used in combination with the engine's fuel system, the STS 7010 should be disabled during engine operation (use the provided "remote pump shut down" feature as shown in the electrical drawing and described above).

PRIMING THE SYSTEM

The pump supplied with the STS 7010 is NOT automatically self-priming and must not be run dry.



! WARNING ! If the pump is allowed to run without fuel, pump damage will occur.

The pump head of the STS 7010 unit is shipped from the factory filled with Diesel #2 to facilitate initial lubrication. This will not eliminate the necessity to prime the complete system. The STS 7010 is primed by using the externally installed priming tee (not provided) on the suction side of the system. Also the primary filter as well as the suction line has to be completely filled with fuel prior to the initial system start-up.

Priming procedure:

1. Ensure the pump is filled with #2 Diesel fuel.
2. Ensure that the inlet ball valve is in the open and the outlet ball valve is in the closed position.
3. Slightly open the manual air vent valve (bleed screw) located inside the STS 7010 (position #6 – page 5).
4. Open the externally installed priming tee (located at the highest point of the suction plumbing), fill the line with fuel until fuel escapes from bleed screw (manual air vent), close the manual air vent, continue filling until all air is bled from the plumbing lines and system, close the priming tee. (for tanks situated on a lower level than the STS 7010, it is recommended that a foot valve is installed at the fuel tank to hold the fuel column).
5. Make sure to completely fill suction line to its highest point with fuel (no trapped air), in particular when the suction line exits the tank top and the STS 7010 is located below that level.
6. Open the outlet ball valve and ensure the inlet ball valve is also in open position.
7. Switch on the pump and observe fuel flow.

The system is equipped with a vacuum gauge on the input side of the pump. The gauge should read 0 to 11" HG vacuum maximum under normal conditions. Vacuum gauge readings reaching 12" HG vacuum indicate excessive debris in the primary filter/ water separator (or a flow restriction or too high suction height and therefore pressure drop in the suction line) and will result in pump shutdown and activate the alarm "HIGH VACUUM ALARM".

Note: 12" HG vacuum = clogged primary filter or suction line flow restriction / excessive lift.

The system's pressure gauge on the secondary filter should show 25 PSI maximum pressure under normal conditions (.433 PSI = 1' vertical head pressure). Pressure gauge readings in excess of 25 PSI pressure indicate excessive filter, or fuel line restrictions and/or friction.


System pressure over 25 PSI indicates a high-pressure failure ("HIGH PRESSURE ALARM" indicator) and will automatically shut down the pump.

The pressure relief valve has a 35-40 PSI set point. System pressure in excess of 35-40 PSI will cause the pressure relief valve to open and vent fuel back to the fuel transfer pump inlet side.

TOUCH-SCREEN CONTROLLER - ALARM FEATURES

The STS 7010 is equipped with an **ALGAE-X Touch-Screen Controller**. System and alarm status are displayed on the industrial control panel (on the door) via indicator lights and on the text display directly on the controller.

TOUCH-SCREEN MENU STRUCTURE

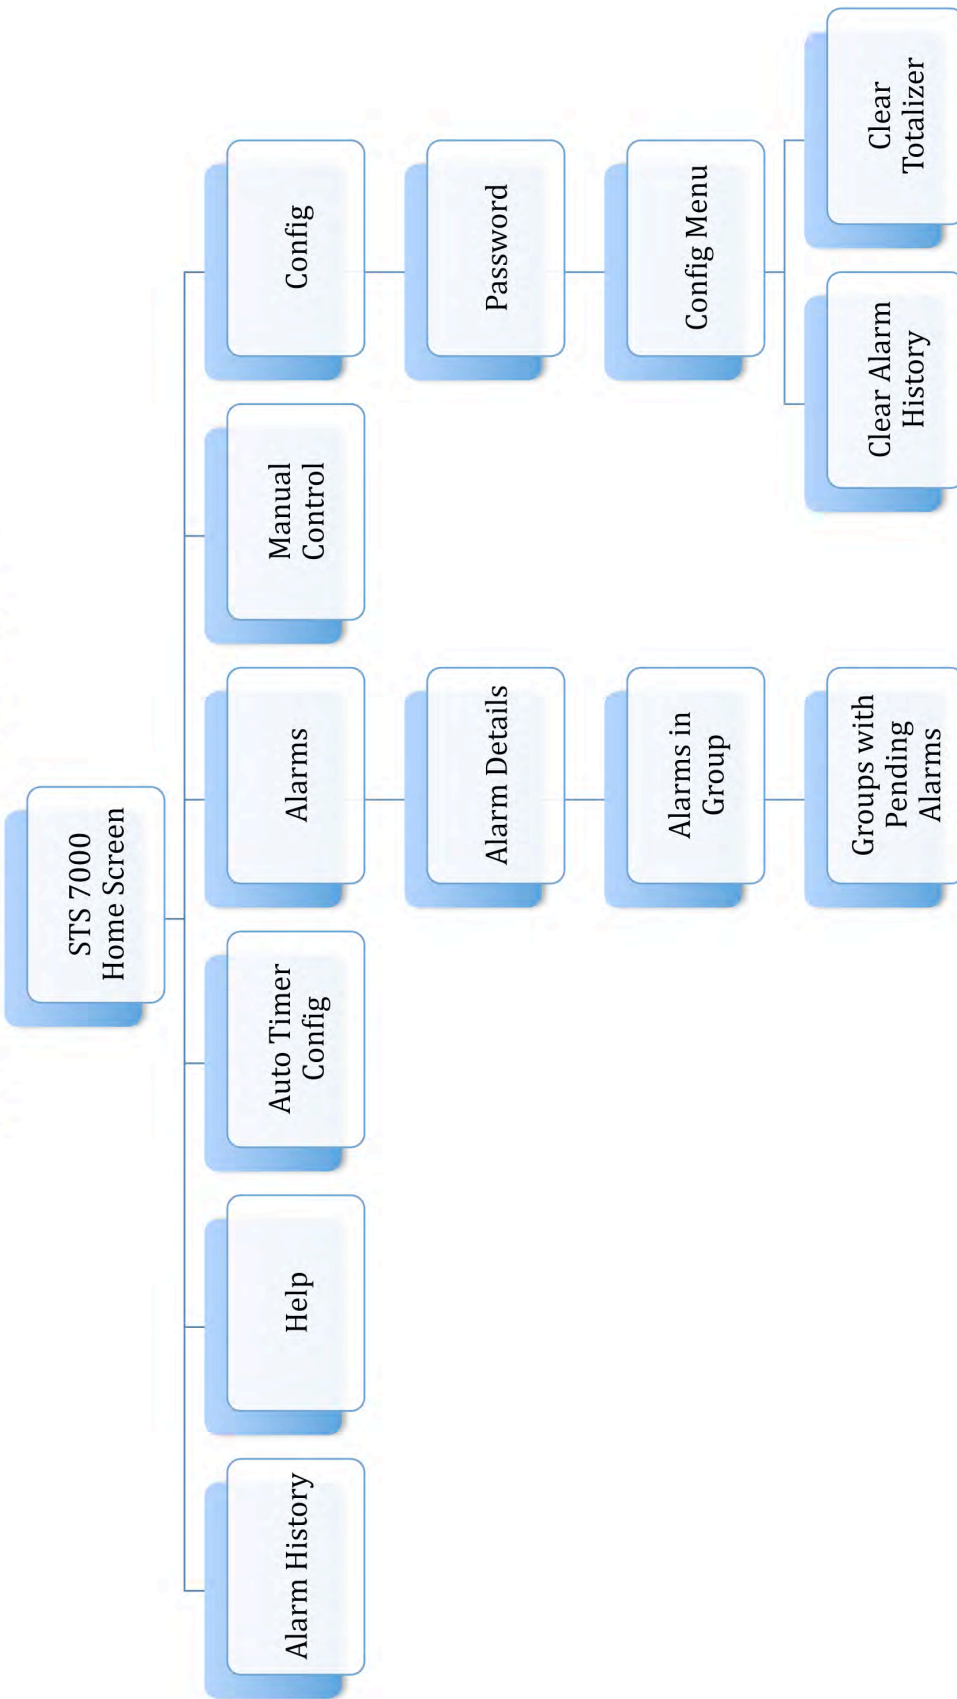

INITIAL START-UP / COMMISSIONING CHECKLIST

FLOW SWITCH SETTING / ADJUSTMENT (“NO FLOW ALARM”)

Note: Flow switch needs to be adjusted to actual flow rate for proper system operation.

Please make sure system is properly primed and check when pump running for a steady stream of fuel without air bubbles in the mechanical flow meter (indicator) inside the STS 7010 enclosure. If the “NO FLOW ALARM” alarm light is blinking (and after 10 seconds illuminate continuously as the pump is turned off) the **flow switch located on the side of the mechanical flow meter needs to be adjusted to the actual flow rate.**

This can be easily done by sliding the black switch (with the wires attached) located on the side of the sight glass carefully up or down (while pump is running) and lining up the flow switch with the indicator ring inside the sight tube of the flow meter showing the actual flow rate. For further information please see enclosed instruction sheet. You can reset the alarm by pushing the “ALARM RESET” button located on the control panel.

GAUGE VENTING / ACCURACY


After shipment, pointer of gauges may not rest at zero due to internal case pressure buildup caused by temperature variations. **Accuracy may be significantly reduced.** To restore **gauge to operating condition, move yellow lever of fill plug to the “open” position** or remove small plug from top of gauge and leave open.

INITIAL TEST PROCEDURE

- **With breakers and power turned on and pump running check all alarms for proper operation:**
 1. Manually raise float switch located in drip/spill tray. Pump should immediately turn off and “LEAK DETECTION” should illuminate. Reset alarm by pushing the “RESET ALARM” button on the control panel.
 2. Slowly partially close inlet ball valve. At 12”HG pump should turn off and “HIGH VACUUM ALARM” should illuminate. Open inlet ball valve again. Reset alarm by pushing the “RESET ALARM” button.
 3. Slowly partially close outlet ball valve. At 25 PSI pump should turn off (after a delay of about 1 second) and “HIGH PRESSURE ALARM” should illuminate. Open outlet ball valve again reset alarm by pushing the “RESET ALARM” button.
 4. Slide the flow switch located on the side of the mechanical flow meter slightly upwards away from the flow indicator inside the sight tube (mark original position before doing so). The “NO FLOW ALARM” indicator should start blinking for 10 seconds and then illuminate constantly as the pump is turned off. Slide flow switch back into original position and reset alarm by pushing the “RESET ALARM” button.

Note: If any of the above described alarm test procedures fail or if any alarm trip value deviates immediately contact Algae-X International.

TOUCH-SCREEN PROGRAMMING MENU STRUCTURE

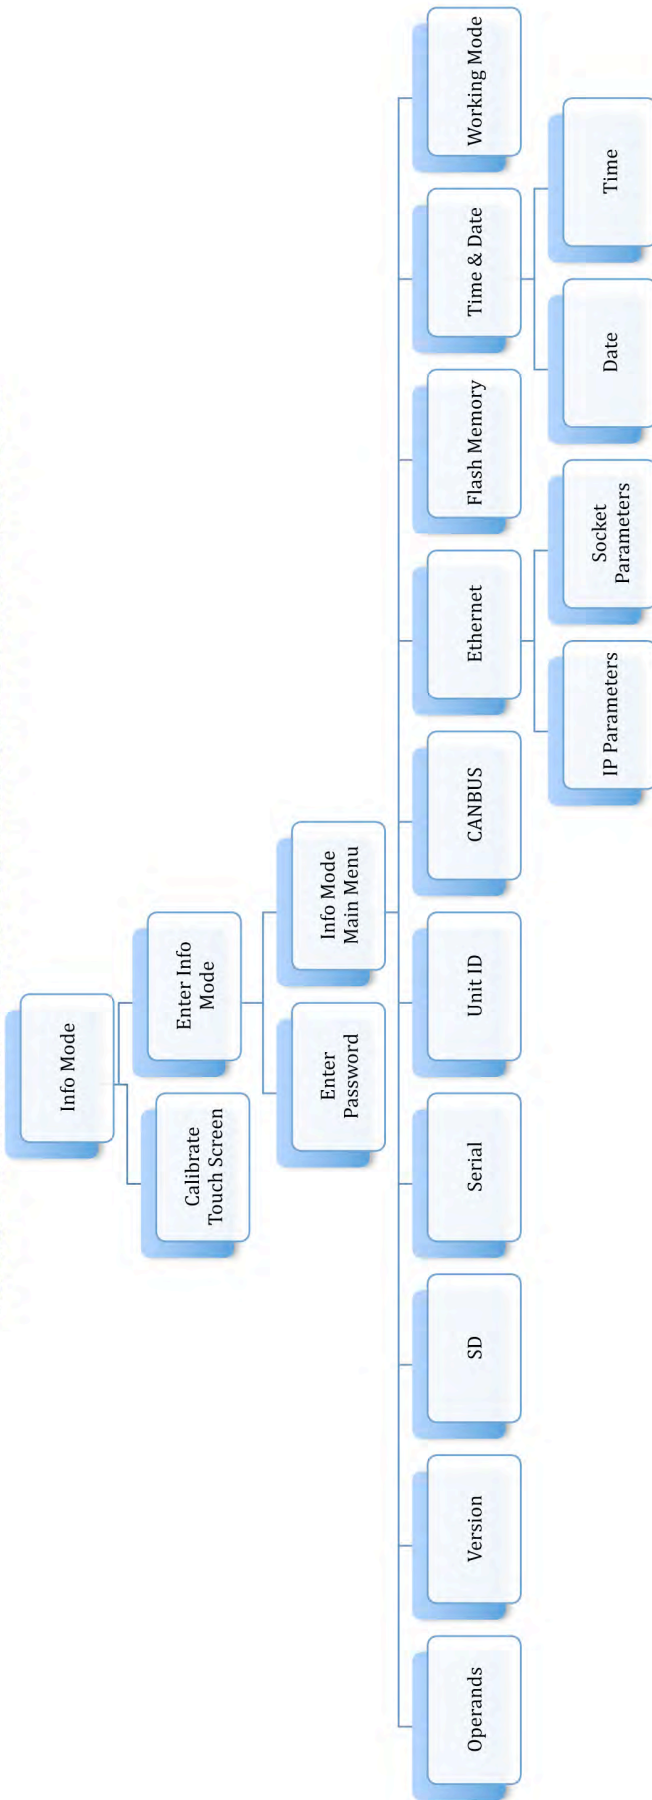

OPERATION



! WARNING ! Do not use with gasoline. This System is not meant for use with gasoline nor with other flammable liquids having a flash point less than 100°F. Use with gasoline or use with any flammable liquids at a temperature exceeding their flash point, presents an immediate explosion and fire hazard.



! WARNING ! Never use the STS 7010 at a temperature exceeding the flash point of its contents.

EMERGENCY STOP

Note: In case of an emergency the pump can be turned off and disabled by depressing the red “EMERGENCY STOP” button on the control panel.

To release the “EMERGENCY STOP” button located on the control panel turn the red knob in the direction indicated by the arrows on the mushroom button and push the “ALARM RESET” button to acknowledge.

PUMP OPERATION

Apply control power to unit. Place breakers in the Algae-X Touch-Screen Controller in the “ON” position.

Automatic:

Place the key switch in the “AUTO” position. When the timer contacts close, the pump will start and run until the timer setting has expired.



Manual (Override):

Place the key switch in the “RUN” position. The pump motor will run until the switch is returned to the “OFF” or “AUTO” mode positions or till an alarm or overload has been tripped.

SETTING THE CURRENT TIME AND DATE

Note: PLC uses military time – all times must be programmed in that format.

1. From the STS 7010 Home Screen, touch and hold the screen background for 5 seconds to enter the Info Mode Menu.
2. Touch the “Enter Info Mode” button.
3. Enter 4 digit security code.
4. Touch the “Time & Date” button.
5. Touch the Date value to set the Date. Use dd/mm/yy format.
6. Touch the Time value to set the current time.
7. Press ESC to navigate back to the STS 7010 Home Screen.

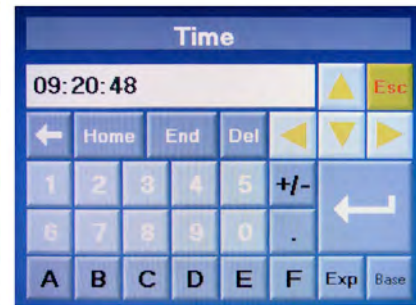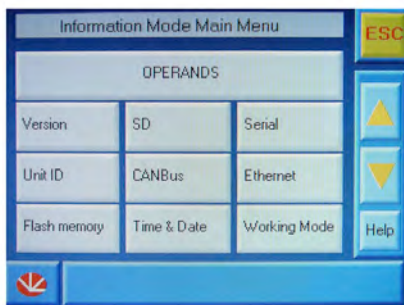

PROGRAMMING THE TIMER

Note: The PLC uses military time – all times must be programmed in that format.

1. From the STS 7010 Home Screen, touch the "AUTO TIMER CONFIG" screen to navigate to the Auto Pump Timer Configuration Screen.
2. Touch the day button to select the day of the week you want the Auto Timer to run.
3. Touch the time values to set the Pump Start and Stop times in Auto (use 24hr time format.)
4. Up to three separate timers can be set for each day of the week.
5. Touch the "Menu" button to return to the STS 7010 Home Screen.



Please call Algae-X International with any questions.

FUEL LINE LEAK

If fuel is detected in the spill / drip tray, the float switch will activate the fuel leak alarm illuminating the "LEAK DETECTION" indicator. The pump motor will shut off and remain locked out of operation until the leak has been corrected and the "ALARM RESET" button has been pushed. Before removing the spilled fuel from the basin, turn the key switch to the "OFF" position. Always make sure to find the cause of the leakage and correct it. After removing the spilled fuel, allowing the leak switch to return to its normal position, the key switch can be returned to the "AUTO" or "RUN" mode.

Note: Disposal of fuel and associated waste should be done in accordance with Federal, State and Local regulations.

STABILIZING AND OPTIMIZING FUEL QUALITY

We recommend treating the fuel with the **ALGAE-X® Fuel Catalyst (AFC-705)**. This will enhance and accelerate the tank cleaning process by breaking down and dissolving existing tank sludge. AFC-705 will decontaminate compartments of the tank that are out of reach of the suction line. Depending on the condition of the fuel and the amount of sludge build-up, it is recommended to initially use a double dose of one to twenty-five hundred (1:2500) instead of one to five thousand (1:5000). This has proven to be essential in accelerating the tank cleaning process. AFC-705 contains detergent, surfactant, dispersant, corrosion inhibitor, lubricity enhancer and combustion catalyst. It does not contain biocides. AFC-705 should always be used periodically in particular to stabilize fuel that is stored for longer periods of time.

Note: In cases of severe tank contaminant build-up (sludge) and high water level in bottom, it is recommended to clean the tank (vacuum bottom) and polish the fuel before initial use of an STS system.

MAINTENANCE



! IMPORTANT ! It is recommended that only qualified, experienced personnel, familiar with this equipment, who have read and understood all the instructions in this manual should install, operate and maintain the system.



! IMPORTANT ! Always disconnect the system from the electric power supply before working or servicing it. Do not proceed with any maintenance unless the pressure or vacuum has been released, the system has been allowed to reach ambient temperature and all fluids have been drained.

PREVENTATIVE MAINTENANCE

The STS 7010 Automatic Fuel Filtration System should be visually **inspected and tested a minimum of every six months according to the procedure below** during light duty cycles. Monthly inspections are recommended for systems that are being used in excess of an average of 8 hours day and five days a week.

- Prior to performing the maintenance procedure ensure that:
 1. The electrical sub-panel mounted main disconnect switch is operating properly,
 2. the user supplied remote circuit breaker is in the "Off" position, and
 3. that all sources of power are isolated from the unit.
 4. Proceed only after this has been verified and properly tagged.
- Drain visible water and sediment from primary filter / water separator (see Servicing Primary Filter / Water Separator below).
- Check enclosure and all parts for corrosion and rust.
- Check locking latches, door and hinge operation.
- Check cabinet mounting hardware. Tighten as necessary.
- Check pump/motor hardware for tightness. Pump/motor hardware will loosen after normal operation due to vibration. This hardware is lock nutted, check all bolts for secure nuts.
- Check all electrical terminals and connections for tightness.
- All motors are permanently lubricated and do not require any lubrication.
- All pumps are self-lubricating and do not require any maintenance.
- Check all plumbing joints for leaks. Tighten fittings and joints as necessary. Remove accumulated fuel in drip tray as necessary.
- Inspect all filters and separators. See section below on filter inspection and service.
- With breakers and power turned on again and pump running **check all alarms** for proper operation:
 1. Manually raise float switch located in drip/spill tray. Pump should immediately turn off and "LEAK DETECTION" should illuminate. Reset alarm by pushing the "RESET ALARM" button on the control panel.
 2. Slowly partially close inlet ball valve. At 12"HG pump should turn off and "HIGH VACUUM ALARM" should illuminate. Open inlet ball valve again. Reset alarm by pushing the "RESET ALARM" button.
 3. Slowly partially close outlet ball valve. At 25 PSI pump should turn off (after a delay of about 1 second) and "HIGH PRESSURE ALARM" should illuminate. Open outlet ball valve again Reset alarm by pushing the "RESET ALARM" button.
 4. Slide the flow switch located on the side of the mechanical flow meter slightly upwards away from the flow indicator inside the sight tube (mark original position before doing so). The "NO FLOW ALARM" indicator should start blinking for 10 seconds and then illuminate constantly as the pump is turned off. Slide flow switch back into original position and reset alarm by pushing the "RESET ALARM" button.

Note: If any of the above described alarm test procedures fail or if any alarm trip value deviates immediately contact Algae-X International.

Note: All filter elements should be replaced at least every six months.

SERVICING PRIMARY FILTER

Set the telltale gauge pressure indicator (red pointer) to slightly above the black needle prior to operation. The gauge will indicate maximum vacuum pressure during system operation.

Clogging filter elements restrict the flow of fuel and the system's vacuum gauge will indicate a pressure drop. The gauge is mounted on top of the primary filter. At a pressure drop of 12" HG, the pump will automatically shut off and activate the "HIGH VACUUM ALARM" indicator light. The signal indicates that it is time to either back-flush or change the filter element.

Servicing and back-flushing primary filter:

1. Turn key switch to the "OFF" position – make sure pump will not turn on
2. Close the inlet and outlet ball valve
3. Open the brass colored bleed screw at the top of the filter cover
4. Place a fuel waste container below the yellow safety drain valve on the bottom of the filter bowl
5. Open the yellow safety drain valve (push & turn counter clockwise)
6. Close after approximately 2 seconds
7. After approximately 10 seconds reopen the drain valve
8. Close after visible sediment, particles and water have been drained from the bowl
9. Prime the filter by removing the cover (4 wing bolts) and pouring clean diesel fuel into the filter body until the fuel level reaches the top of the filter body
10. Replace the lid. Note: Evenly tighten the wing bolts to ensure a good seal
11. Close bleed screw on top of the lid
12. Open the inlet and outlet ball valve
13. Push the "ALARM RESET" button on the control panel to acknowledge the alarm and reset it
14. Return the pump selector key switch to "AUTO" or "RUN"
15. Check for leaks when re-starting and pressurizing the system. Your system is now ready to resume normal operation

Note: Elements can be back-flushed up to 5 times before replacement is required

SERVICING WATER SEPARATOR

If the water level in the primary filter/water separator reaches a certain level in the bowl, the water sensor will trigger the alarm "HIGH WATER ALARM" and shut off the pump. The signal indicates that it is time to drain the bowl on the water separator.

Draining water from the primary filter/water separator:

1. Turn key switch to the "OFF" position – make sure pump will not turn on
2. Close the inlet and outlet ball valve
3. Open the brass colored bleed screw on the top of the filter cover
4. Place a fuel waste container below the yellow safety drain valve on the bottom of the filter bowl
5. Open the yellow safety drain valve (push & turn counter clockwise)
6. Close after approximately 2 seconds
7. After approximately 10 seconds, reopen the drain valve
8. Close after visible sediment, particles and water have been drained from the separator
9. Prime the filter by removing the cover (4 wing bolts) and pouring clean diesel fuel into the filter body until the fuel level reaches the top of the filter body
10. Replace the lid. Note: Evenly tighten the wing bolts to ensure a good seal
11. Close bleed screw on top of the lid
12. Open the inlet and outlet ball valve
13. Push the "ALARM RESET" button on the control panel to acknowledge the alarm and reset it
14. Return the pump selector key switch to "AUTO" or "RUN"
15. Check for leaks when re-starting and pressurizing the system. Your system is now ready to resume normal operation

SERVICING SECONDARY FILTERS

Clogging filter elements and saturation of the water block filters restrict the flow of fuel and the system's pressure gauge will indicate a pressure drop. The gauge and differential pressure indicator are mounted on top of the secondary filter head. At a pressure drop of 25 PSI (red dial area of the gauge) the pump will automatically shut off and activate the "HIGH PRESSURE ALARM" indicator light. The signal indicates that it is time to change the filter elements.

There are several types of Algae-X spin on fine filters available; we recommend using the WB-3 (3 micron water block fine filter). The Algae-X Water Block incorporates polymer technology to remove emulsified water from fuel.

Changing the secondary filters:

Note: Both secondary spin on filters need to be replaced at the same time. Always use two of same type filter elements – never mix two different kinds or micron ratings.

1. Turn key switch to the "OFF" position – make sure pump will not turn on
 2. Close the inlet and outlet ball valve
 3. Place an appropriate container underneath the filters
 4. Remove both old spin on filters with the provided filter wrench by turning the cartridge counter clock wise seen from the bottom of the cartridge
 5. Apply a film of lubricating oil to the gasket of the new filters. Screw the new filter canisters to the filter head until the gasket is tight and secure (an additional ½ to one turn after the filter makes contact with the gasket)
 6. Open the inlet and outlet ball valve
 7. Push the "ALARM RESET" button on the control panel to acknowledge the alarm and reset it
 8. Return the pump selector key switch to "AUTO" or "RUN"
 9. Check for leaks when re-starting and pressurizing the system
- Your system is now ready to resume normal operation

Note: Disposal of fuel, associated waste and filters should be done in accordance with Federal, State and Local regulations.



! WARNING ! Some fuels may have been treated with biocides. Biocides are extremely toxic and may enter the body through the skin. It is recommended to use adequate protection and proper precautions if fuel contains biocide type products.

TROUBLESHOOTING

No fuel delivery

1. Pump does not run
2. Pump is not primed
3. Fuel supply line blocked
4. Excessive lift
5. Air leak in fuel supply to pump
6. Pump rotation direction incorrect
7. Intake or outlet valve closed
8. Check valve installed backwards

Insufficient fuel delivered

1. Air leak at inlet
2. Defective pressure relief valve or check valve
3. Excessive lift
4. Pump worn
5. Inoperative foot valve
6. Piping improperly installed or dimensioned
7. Primary filter/water separator plugged

Rapid pump wear

1. Pipe strain on pump causing bind
2. Worn pump/motor coupler
3. Pump has been run dry or with insufficient fuel
4. Plumbing on inlet side not appropriately dimensioned

Alarm "HIGH VACUUM ALARM" comes on with clean or new filter element installed

1. Heavily contaminated fuel / excessive water in tank
2. Restriction in plumbing on inlet side too high
3. Excessive lift
4. Inoperative foot valve
5. Inlet ball valve not fully open
6. Suction line clogged

Alarm "HIGH PRESSURE ALARM" comes on with clean or new filter elements installed

1. Heavily contaminated fuel / excessive water in tank
2. Restriction in plumbing on discharge side too high
3. Head (lift) on discharge side too high
4. Check valve stuck or defective
5. Outlet ball valve not fully open
6. Discharge line clogged

Pump requires too much power

1. Air in plumbing lines
2. Liquid too viscous
3. Bent pump shaft, binding rotor

Noisy operation

1. Insufficient fuel supply
2. Air leaks in the inlet pipe
3. Air or gas in fuel on the suction side
4. Worn out spider coupling
5. Pump coupler out of balance

Pump requires frequent re-priming

1. Inoperative foot valve
2. Inoperative check valve
3. Inoperative solenoid valve (optional)
4. Pump cavitations
5. Plumbing air leaks
6. Lift too high
7. Leaking pump seal

Motor does not turn or turns intermittently

1. Control power not available
2. Motor thermal overload condition
3. Pump failed and seized
4. Motor failure
5. Emergency Button depressed

Pump leaks fuel

1. Loose pump plumbing fittings
2. Worn pump shaft seal
3. Pump pressure relief valve failure
4. Fuel leak elsewhere and fuel dripping or running towards the pump
5. Excessive head from overhead storage tank
6. Worn pump O-rings or seals

AUTOMATIC FUEL FILTRATION Systems Warranty

LIMITED WARRANTY

ALGAE-X® International makes every effort to assure that its products meet high quality and durability standards and expressly warrants the products described herein, against defects in material and workmanship for a period of one (1) year from the date of purchase. This warranty is not intended to supplant normal inspection, care and service of the products covered by the user, and shall not obligate ALGAE-X® to provide free service during the warranty period to correct breakage, maladjustment or other difficulties arising out of abuse, misuse, or improper care and maintenance of such products. Our express warranty is subject to the following terms and conditions:

1. This warranty shall only extend to and is only for the benefit of original purchasers who use the products covered hereby
2. Any warranty claim received by ALGAE-X® after one (1) year from the date of purchase will not be honored even if it is claimed that the defect occurred prior to one (1) year from the date of purchase.
3. This warranty shall not apply to products (1) which have been tampered with, altered or repaired by anyone other than ALGAE-X® without the express prior written consent of ALGAE-X® (2) which have been installed improperly or subject to misuse, abuse, accident, negligence of others, improper operation or maintenance, neglect or modification, or (3) which have had the serial number altered, defaced or removed.
4. The liability of ALGAE-X® under this warranty is limited to the repair or replacement of the defective product. ALGAE-X® assumes NO LIABILITY for labor charges or other costs incurred by any purchaser incidental to the service, adjustment, repair, return, removal or replacement of products. ALGAE-X® ASSUMES NO LIABILITY FOR ANY GENERAL, SPECIAL, INCIDENTAL, CONSEQUENTIAL, CONTINGENT OR OTHER DAMAGES UNDER ANY WARRANTY, EXPRESS OR IMPLIED, AND ALL SUCH LIABILITY IS HEREBY EXPRESSLY EXCLUDED.
5. ALGAE-X® MAKES NO WARRANTIES, EXPRESS OR IMPLIED, OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR OTHERWISE, WITH RESPECT TO THE PRODUCTS COVERED BY THIS WARRANTY POLICY, EXCEPT AS EXPRESSLY PROVIDED FOR HEREIN. NO EMPLOYEE, AGENT, REPRESENTATIVE OR DISTRIBUTOR IS AUTHORIZED TO MAKE ANY WARRANTY ON BEHALF OF ALGAE-X® OTHER THAN THE EXPRESS WARRANTY PROVIDED FOR HEREIN.
6. ALGAE-X® reserves the right at any time to make changes in the design, material, function and specifications of its products. Any such changes shall not obligate ALGAE-X® to make similar changes in such products that were previously manufactured.

WARRANTY CLAIM PROCEDURE

To make a claim under this warranty, please call our ALGAE-X® at (239) 690 9589 or (877) 425-4239, and provide: Name and location where unit was purchased, the date and receipt of purchase, model number, serial number, and a detailed explanation of the problem you are experiencing. The Customer Service Representative may, at the discretion of ALGAE-X®, arrange for a Field Engineer to inspect your system. If the inspection discloses a defect covered by its limited warranty, ALGAE-X® will either repair or replace the defective parts or products. ALGAE-X® assumes no liability, if upon inspection, ALGAE-X® or its representative determines that there is no defect or that the damage to the system resulted from causes not within the scope of this limited warranty. For service and sales, please contact ALGAE-X®:

ALGAE-X® International
5400-1 Division Drive, Fort Myers, FL 33905 • 877-425-4239 • Fax: 239-690-1195
Internet: www.algae-x.net • Email: algae-x@algae-x.net

Technical Assistance and Ordering

Please write to, fax, email or call:

ALGAE-X® International
5400-1 Division Drive
Fort Myers, FL 33905

Tel: 239-690-9589
Fax: 239-690-1195
Email: algae-x@algae-x.net
Internet: www.algae-x.net

Please provide the following information:

Serial Number of your STS 7010, the required part numbers and quantity.

The drawings / parts list included in this manual are the most accurate source of part numbers for your STS 7010.

REPLACEMENT FILTER ELEMENTS

Primary Filter:

04060S 60 Micron Stainless Steel re-usable, cleanable filter element
04030 30 Micron replacement filter element
04010 10 Micron replacement filter element
30440 Lid Gasket

Secondary Filter:

WB-3 3 Micron Water Block spin on filter cartridge
WB-10 10 Micron Water Block spin on filter cartridge
FF-1 1 Micron Spin On Filter Cartridge
FF-3 3 Micron Spin On Filter Cartridge
FF-10 10 Micron Spin On Filter Cartridge
FF-25 25 Micron Spin On Filter Cartridge
FFZ-3 X-Glass 3 Micron Absolute Spin On Filter Cartridge

Also available:

Larger or smaller capacity, custom designed systems for higher or lower flow rates
Two Tank Control
Digital Flow Meter
Foot Valves
Rotor Sight Glass

STS 7010 System Identification

Serial Number: _____ (e.g. B 070010 – 6100)

System Specification:

Voltage:

120 V AC / 60 Hz 230 V AC / 50 Hz

Primary Filter Element:

60 Micron Stainless Steel (cleanable) 10 Micron
 30 Micron

Secondary Filter Element:

3 Micron Water Block 10 Micron Water Block

Inspected by: _____

Date: _____

APPENDIX A - ABBREVIATIONS USED IN THIS MANUAL

Abbreviations of terms used with STS 7010 Automatic Fuel Filtration Systems. When following a drawing utilize this guide to define abbreviated system and component names. This is a master list. The drawings and text pertaining to your equipment may not contain all these terms.

AC	Alternating Current	N.C.	Normally Closed
AHR	Alarm Horn Relay	NEC	National Electric Code
AH	Alarm Horn	NEMA	National Electric Manufacturers Assoc.
BPRV	Back Pressure Regulating Valve	N.O.	Normally Open
BRK	Motor/Pump Bracket	NP	Nameplate
BV	Ball Valve	NPT	National Pipe Thread
C	Contactors	O.D.	Outside Diameter
CB	Circuit Breaker	OLR	Over Load Relay
CSR	Check Strainer Relay	OPT	Option
CV	Check Valve	PCB	Printed Circuit Board
DC	Direct Current	PCRX	Pump Control Relays
DPDT	Double Pole Double Throw	PG	Pressure Gauge
F	Fuse	PLR	Pipe Leak Relay
FLWS	Flow switch	PRV	Pressure Relief Valve
FS	Float switch	PRS	Pressure Switch
GA	Gauge	PS	Power Supply
GAL	Gallons	PSI	Pounds Per Square Inch
GPM	Gallons Per Minute	PSR	Pressure Switch Relay
HFL	High Fuel Level Relay	PRR	Pump Running Relay
HG	Mercury	SC	Swing Check Valve
HP	Horsepower	SOL	Solenoid
HZ	Hertz	TB	Terminal Block
I.D.	Inside Diameter	T	Control Transformer
JB	Junction Box	TDR	Time Delay Relay
" HG	Inches of Mercury	TEFC	Totally Enclosed, Fan Cooled
L	Lamp	THR	Tank Heater Control Relay
L.E.D.	Light Emitting Diode	TS	Transducer Pressure Switch
LFF	Loss of Flow Relay	V	Voltage
LFL	Low Fuel Level Relay	VAC	Voltage, Alternating Current
LPR	Low Pressure Relay	VDC	Voltage, Direct Current
MDB	Main Distribution Block	VG	Vacuum Gauge
MDS	Main Disconnect Switch		
MOT	Motor		

APPENDIX B – DRAWINGS

AXI designs and manufactures standardized and custom-engineered Automated Fuel Conditioning, Fuel Polishing and Transfer Systems, Tank Cleaning Equipment, Fuel Additives and In-line Fuel Conditioners to ensure optimal fuel quality at all times.

Our scope of expertise covers fuel storage and fuel supply systems from single engine installations to power plants. AXI is your single source for all fuel conditioning related equipment and support available world-wide.

- Peak Engine Performance
- Reliable Power Supply
- Lower Maintenance Costs
- Lower Exhaust Emissions



Read about the secret life of fuel and find solutions in the AXI Brochure, available at www.AXIFuelConditioning.net.



See the full product line in the AXI Systems and Equipment Catalogue, available at www.AXIFuelConditioning.net.



ALGAE-X International
5400-1 Division Dr
Fort Myers, FL 33905
1 877-425-4239
+1 239-690-9589
www.AXIFuelConditioning.com

Distributed By

